


CHOWA ASSEMBLY INSTRUCTIONS

ZINCUTEC GMBH

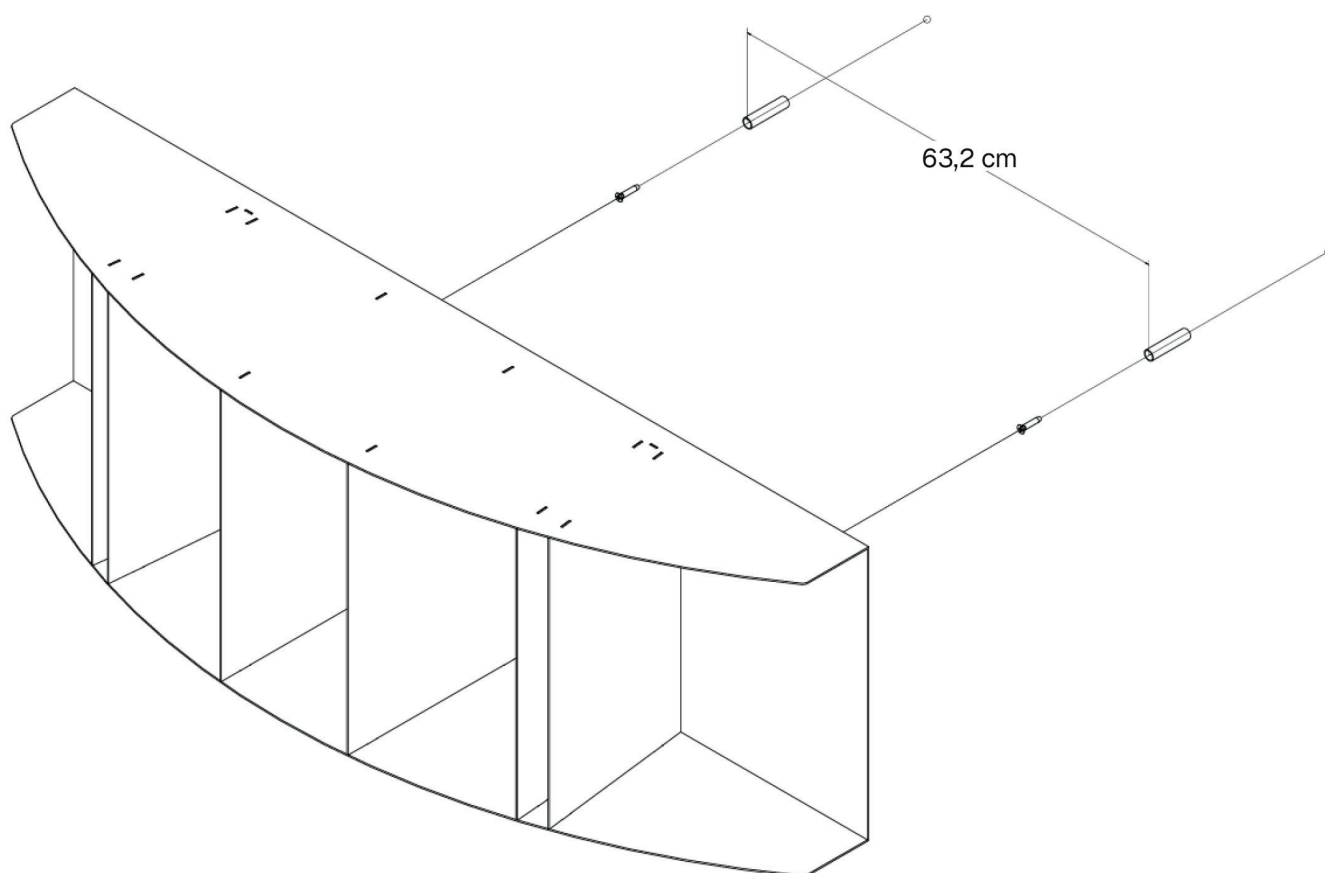

1. INSTRUCTIONS

1. Drill two holes into the wall.
Make sure both holes are at the same height and the distance between them is 63.2 cm.

2. Insert a wall plug into each hole.
Screw in the screws, leaving about 1 cm between the screw head and the wall.

3. Mount the CHOWA unit.
Align the mounting holes of the unit with the screws and carefully hang it in place.

Complete! Have fun.

2. CONTENTS / PARTLIST

2 x Screw hook 2 x Dowel

PRODUCT CARE




PRODUCT SAFETY



CHOWA MONTAGEANLEITUNG

ZINCUTEC GMBH

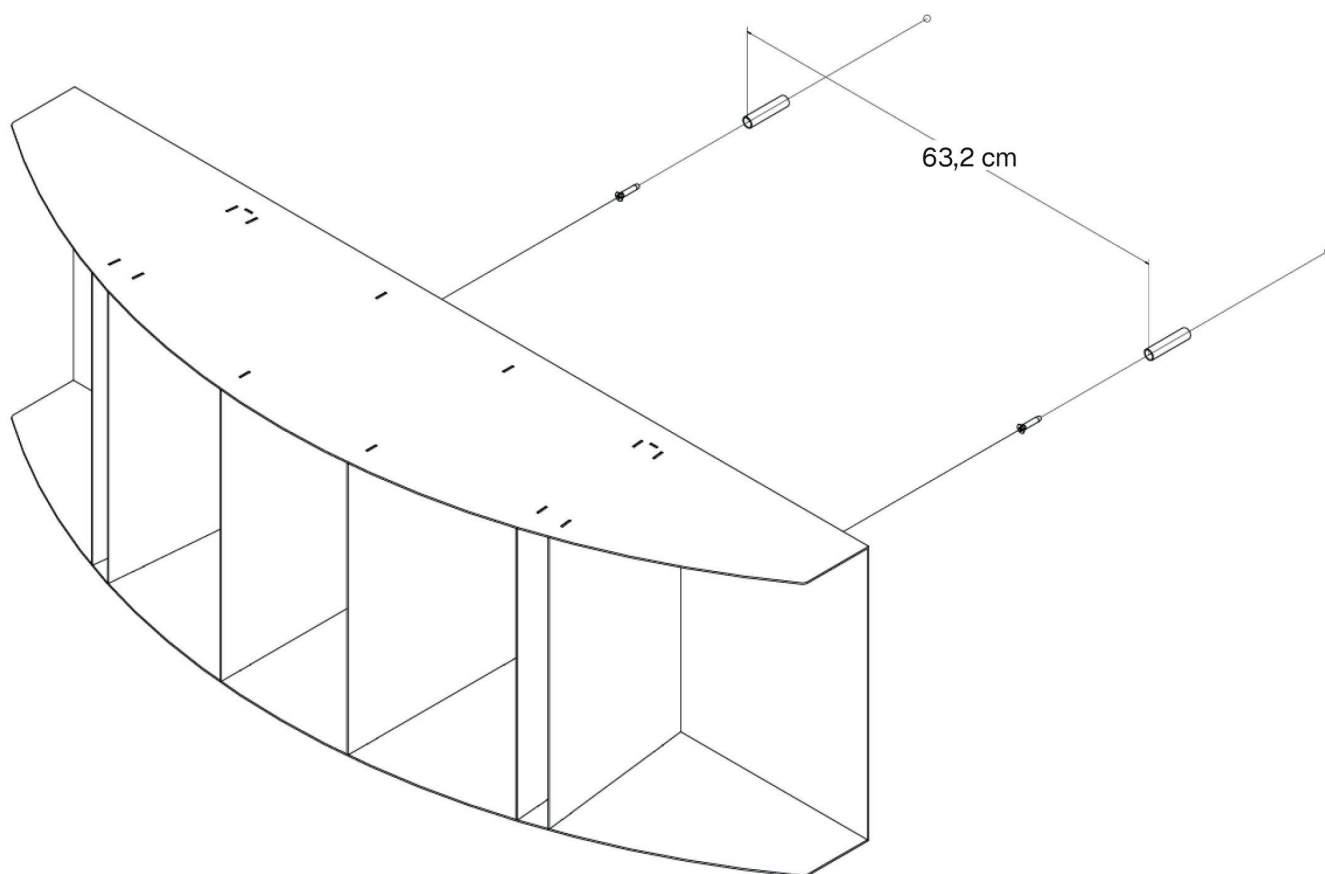

1. ANLEITUNG

1. Bohren Sie zwei Löcher in die Wand.
Achten Sie darauf, dass beide Löcher auf gleicher Höhe sind und der Abstand zwischen ihnen 63,2 cm beträgt.

2. Stecken Sie in jedes Loch einen Dübel.
Drehen Sie anschließend die Schrauben ein, lassen Sie sie aber etwa 1 cm aus der Wand herausstehen.

3. Hängen Sie die CHOWA Einheit ein.
Richten Sie die Befestigungslöcher der Einheit auf die Schrauben aus und lassen Sie sie vorsichtig einrasten.

Fertig! Viel Spaß.

2. INHALT / STÜCKLISTE

2 x Schraubhaken, 2 x Dübel

PRODUKTPFLEGE



PRODUKTSICHERHEIT

